



LW RF Studio - User Manual

Oct 26, 2026 · Luc Wathelet

LW RF Studio - User Manual	1
1. Introduction.....	2
2. Installation and first start.....	2
Install LW RF Studio.....	2
Install openEMS.....	3
First start.....	3
3. The main window: PCB Antenna Lab.....	4
Menus.....	5
Toolbar.....	6
Views.....	6
Geometry view.....	7
4. Designing an antenna	8
Start from a template.....	8
Parameters.....	9
Shapes.....	9
Feeds.....	10
Vias	10
Stackup	10
Model errors.....	10
5. Importing designs	10
PCB boards: Eagle, Fusion, KiCad and Altium	10
Gerber and drill files	12
MATLAB pcbStack scripts.....	12
6. Simulation settings	12
Fast, Standard and Accurate presets.....	12
Settings.....	13
Making a run faster.....	15
7. Running a simulation	15
How a run works.....	15
Progress.....	15
When it finishes.....	16
The simulation folder.....	16
Results saved with the project.....	16

If the run stops with an error.....	16
Tuning to a frequency.....	16
8. Results: S11, impedance, VSWR and Smith chart.....	18
Reading values on the charts.....	19
Comparing with a measurement.....	19
Matching network.....	19
RF calculator.....	20
9. Radiation pattern.....	21
The 2D pattern.....	21
The 3D pattern.....	22
10. Current distribution.....	22
Reading the view.....	23
Controls.....	23
How it is computed.....	23
11. Exporting.....	24
The antenna as a PCB part.....	24
Results.....	24
Images.....	24
Reports.....	25
openEMS model.....	25
12. SmithMatch.....	25
Opening SmithMatch.....	25
The window.....	25
Designing a network.....	26
Würth design kits.....	26
VSWR sweep, files and printing.....	26
13. Command line.....	27
Example: a quick sweep.....	28
KiCad plugin: LW Antenna Check.....	28
14. Trial and license.....	29
The trial.....	29
Getting a license.....	29
Good to know.....	30

Licence messages.....	30
Legal.....	31
15. Tips and troubleshooting.....	31
A tuning workflow.....	31
Why simulation and measurement differ.....	31
Problems and solutions	32
16. Quick reference.....	33
Keyboard.....	33
Mouse.....	33
Expressions	33
Files.....	34
Contact.....	34

1. Introduction

LW RF Studio is RF engineering software for Windows by lw tech, a brand of Wattlet AS. It brings two tools together in one program, with one installer and one license:

- **PCB Antenna Lab**, the main window, designs printed antennas (inverted-F IFA, meandered MIFA and other planar antennas) and simulates them with openEMS, a free full-wave FDTD solver. You describe the antenna with named dimensions, run a simulation and read S11, impedance, VSWR, the Smith chart, the radiation pattern and the current on the copper, much as in MATLAB's PCB Antenna Designer.
- **SmithMatch** designs L/C matching networks on an interactive Smith chart, with the values of the Würth Elektronik design kits (section 12). PCB Antenna Lab opens it with **Tools > SmithMatch** (Ctrl+M) and can send it the simulated antenna impedance.

With PCB Antenna Lab you can:

- Start from a template, or import a MATLAB pcbStack script, a board from Eagle, Autodesk Fusion, KiCad or Altium, or its Gerber files.
- Change any dimension and see the geometry update at once; sweep one parameter with the tuning slider.
- Let **Simulate > Tune to frequency** find the length and the match that put the resonance and the best VSWR at your frequency.
- See the board in 2D, in 3D and as a realistic picture to scale.
- Simulate in openEMS with live progress, compare with a measured VNA trace and try an L/C matching network, or design one in SmithMatch.
- Export the antenna as a KiCad footprint, an Eagle library or an Altium footprint library.

The program runs for 30 days from the first start on a PC (the trial), with every feature. After that it needs a license for that PC. Section 14 explains the trial and how to get a license.

Requirements: Windows 10 or 11 (64-bit) and, for the simulations, openEMS for Windows (free, installed separately, see section 2). A simulation takes from about a minute (a dipole) to about four minutes (the TI DN007 IFA) on a current multi-core PC, and longer for large imported boards.

2. Installation and first start

Install LW RF Studio

1. Run `LWRFStudio-<version>-setup.exe`. Setup is available in English, Norwegian and French.
2. Accept the license agreement.
3. Choose whether to install for all users or only for you, then the folder (for all users, the default is `C:\Program Files\LW RF Studio`) and, if you want, a desktop icon.

The program is self-contained: no .NET runtime is needed. Running a newer setup upgrades the installed version and keeps your projects, settings and license. LW RF Studio installs alongside an older PCB Antenna Designer; it does not replace or uninstall it.

Setup also installs the command-line tool (section 13), the sample projects (Start menu > LW RF Studio > Samples), the README, the license agreement and the third-party licenses.

Install openEMS

openEMS is the solver. It is free software (GNU GPL v3) and is not part of the program. If setup doesn't find it on the PC, it offers to **download openEMS 0.37.0** from its official release (65 MB, needs internet) and installs it in the program's openEMS folder. Uninstalling removes it again.

Without internet, or to use your own copy:


1. Download the Windows build from github.com/thliebig/openEMS-Project/releases.
2. Unzip it, for example to C:\openEMS.

The program finds openEMS.exe by itself in C:\openEMS, C:\opt\openEMS, C:\Program Files\openEMS, %USERPROFILE%\openEMS and on the PATH. If it is elsewhere, the first simulation asks you to select it. You can change it later with **Tools > Locate openEMS.exe**. The radiation pattern also needs nf2ff.exe, which comes with openEMS in the same folder.

First start


The first time, the program opens the Printed IFA template. After that it reopens the last project you opened or saved (File > Open recent lists the others), and shows the results of its last simulation if they are still in its simulation folder.

The first start on a PC also starts the 30-day trial. The title bar shows the days left, for example “LW RF Studio (trial, 30 days left) - Printed IFA”, and at every start a window shows them with a **Buy now** button (section 14). After the trial, without a license, the program opens only the license window.

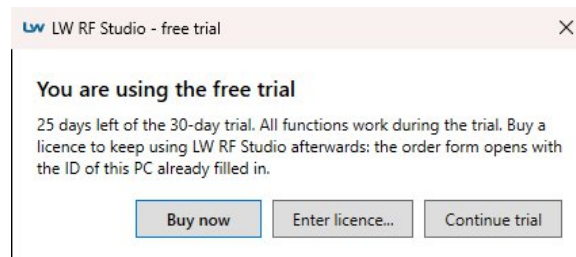

The trial window at the start of the program.

At every start the program also tells lwtech.org that it runs: the PC ID, the version and whether it has a license. When a newer version is released, a window says so, with what is new. **Download** opens the download page, and **Do not remind me of this version** stops the reminder for that version. Without internet the program starts as usual.

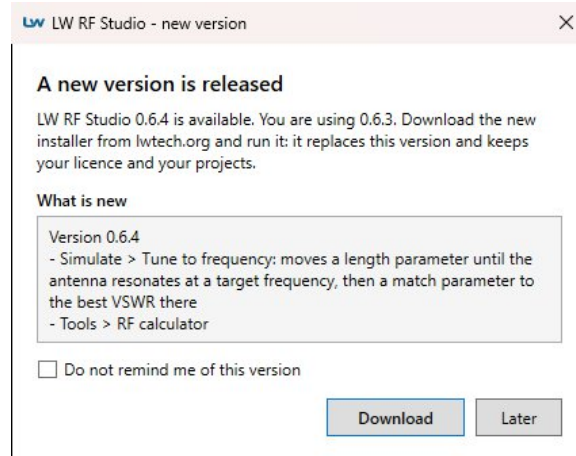

The new-version notice, with the release notes.


3. The main window: PCB Antenna Lab

PCB Antenna Lab is the main window of LW RF Studio. It has four areas:

- **Editors (left):** five tabs. Parameters, Shapes, Feeds & vias, and Board & simulation describe the antenna; Matching tries a matching network on the results. Model errors are listed in red under the tabs, and the simulation will not run until they are fixed.
- **Views (right):** the geometry and the results, one tab each.
- **Toolbar** (above the views): Run, Pause and Stop, layer and mesh display, Fit, and a one-line summary of the last result.
- **Status bar (bottom):** the last message, the cursor position in mm, the mesh size, and the progress of a running simulation.

Drag the bar between the editors and the views to share the width between them.

The title bar shows the program, the days left during the trial, the project and its file, and a * when there are unsaved changes, for example “LW RF Studio (trial, 12 days left) - My IFA (my_ifa.json) *”.

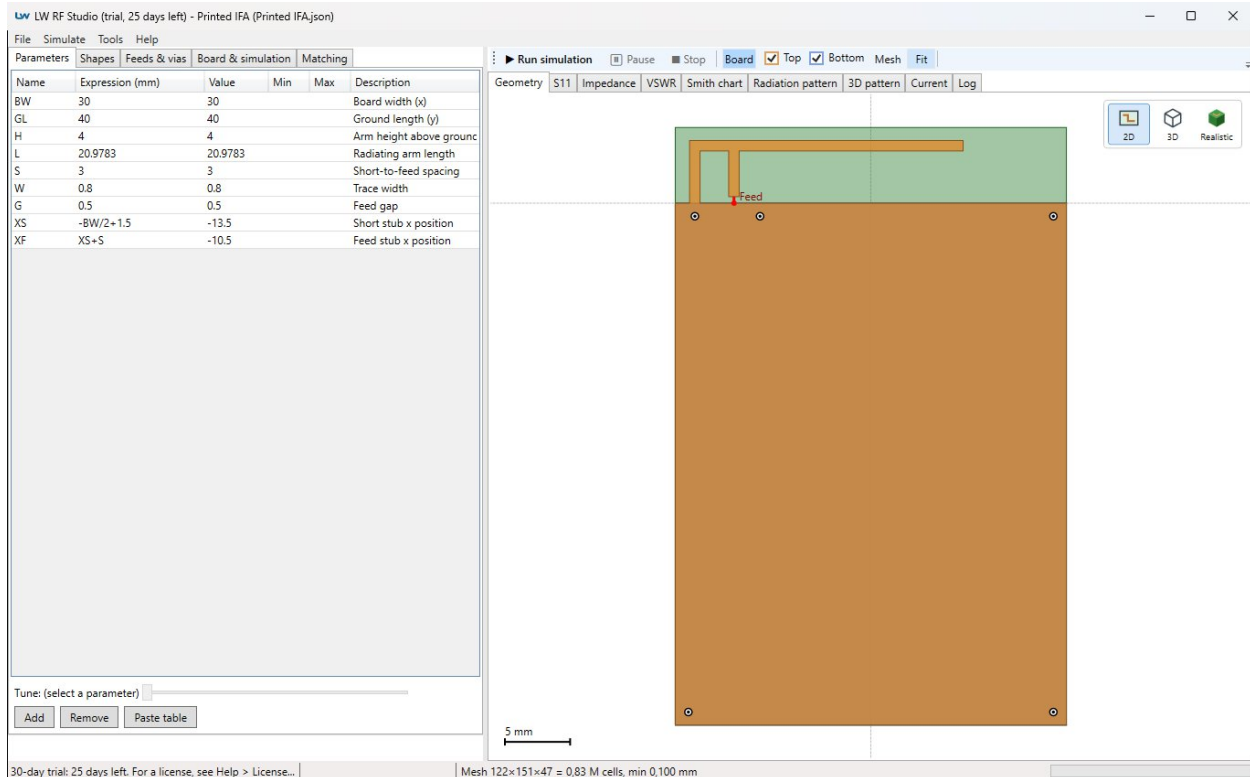

The main window: the editors on the left, the views on the right (the Printed IFA template).

Menus

Menu	Command	What it does
File	New from template	Starts a new project from one of the built-in antennas (section 4).
File	Open (Ctrl+O), Save (Ctrl+S), Save As	Projects are saved as .json files.
File	Open recent	The last ten projects you opened or saved, newest first.
File	Import PCB board (Ctrl+I)	Reads an Eagle .brd, Autodesk Fusion .fbrd, KiCad .kicad_pcb or Altium .PcbDoc board (section 5).
File	Import Gerber and drill files	Reads a set of Gerber and Excellon files (section 5).
File	Import MATLAB pcbStack script	Reads a MATLAB .m script that builds a pcbStack (section 5).
File	Export openEMS XML, KiCad footprint, Eagle library, Altium footprint library, results, radiation	See section 11.

Menu	Command	What it does
	pattern	
Simulate	Run (F5), Stop	Starts or stops openEMS (section 7).
Simulate	Tune to frequency	Tunes a length and a match parameter to a target frequency (section 7).
Simulate	Load results from simulation folder	Shows the results of an earlier run (section 7).
Simulate	Load reference S11, Clear reference	Overlays a measured trace on the charts (section 8).
Tools	SmithMatch (Ctrl+M)	Opens the SmithMatch window (section 12).
Tools	RF calculator	Return loss, VSWR and $ \Gamma $, a quarter-wave estimate and the scaling of a design (section 8).
Tools	Locate openEMS.exe	Selects the solver if it is not found automatically.
Help	Licence, About LW RF Studio	Licence status, buying a license and activation (section 14), version and credits.

Toolbar

- **► Run simulation, || Pause and ■ Stop:** start, pause or stop the simulation (section 7).
- **Board** and one box per metal layer: show or hide the board outline and each copper layer in the Geometry view.
- **Mesh:** draws the openEMS mesh lines over the geometry, so you can check that the fine mesh covers the antenna.
- **Fit:** zooms the Geometry view to the whole board, the same as double-clicking it.
- **2D, 3D and Realistic** (top right of the Geometry view): see the board flat, in 3D or as it will be made (see Geometry view below).
- **Summary:** after a simulation, the resonance frequency, the best S11, the input impedance and the -10 dB bandwidth, and the matched result when a matching network is set.

Views

Tab	Shows
Geometry	The board seen from above, updated as you edit; also in 3D and as a realistic picture.
S11, Impedance, VSWR, Smith chart	The input match of the antenna versus frequency (section 8).
Radiation pattern, 3D pattern	The far field (section 9).

Tab	Shows
Current	The current on the copper (section 10).
Log	The progress and the openEMS output of the running simulation (section 7).

Geometry view

Drag to pan, turn the mouse wheel to zoom, and double-click to fit the board. The status bar shows the cursor position in mm, with x to the right and y up. Where the origin lies depends on the project; imported boards put it at the bottom-left corner of the board.


Select a shape: click it. The Shapes tab opens on its row, ready to edit, and the shape is outlined in the view. The cursor becomes a hand over a shape.

2D, 3D and Realistic: the buttons at the top right of the view change how the board is drawn:


- **2D:** the board from above, as above.
- **3D:** the layers one above the other, each in its colour, with the substrate see-through. A thin board is drawn thicker than it is, so that every layer shows.
- **Realistic:** the board to scale as it will be made: green solder mask, copper-coloured copper, the vias and holes drilled through, a light and soft shadows.

In 3D and Realistic, drag to rotate, turn the wheel to zoom and double-click to return to the start view.

Save image saves the view as a PNG file.

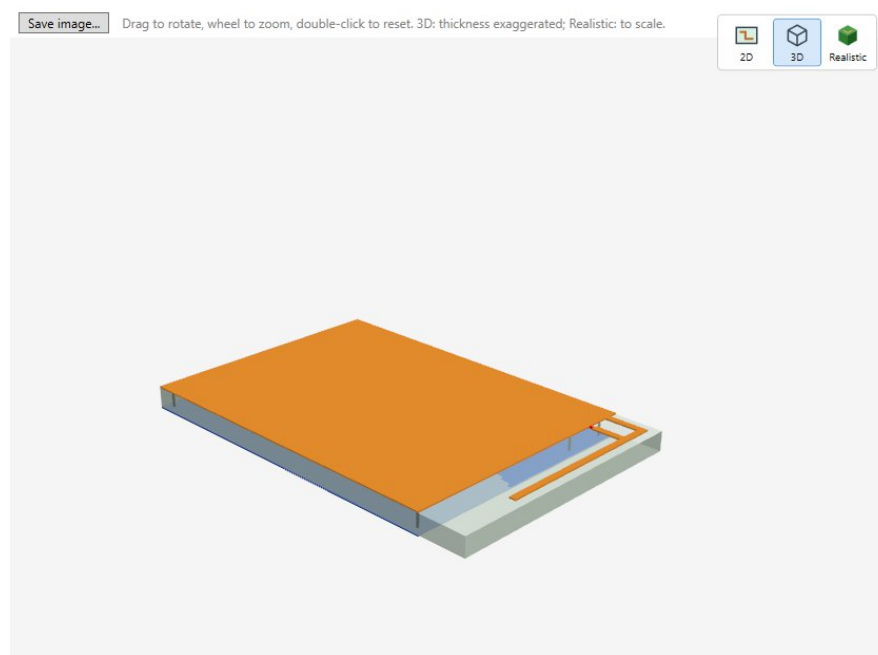

The 3D view: each layer in its colour, the substrate see-through.

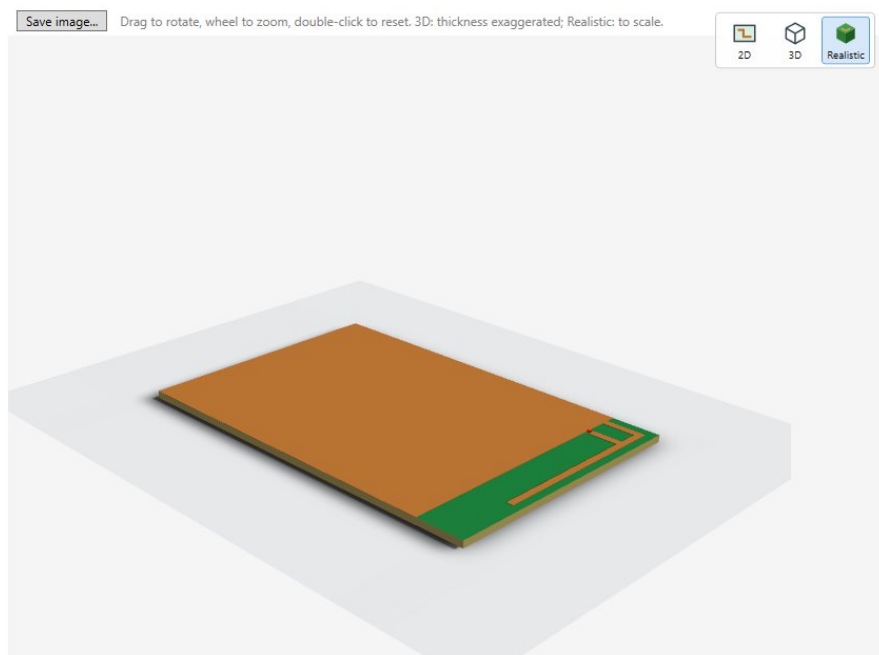

The Realistic view: the board to scale, with solder mask, copper, drills and shadows.

4. Designing an antenna

A project describes the antenna in four parts: named **parameters**, the copper **shapes** drawn with them, the **feeds and vias**, and the board **stackup**. All lengths are in millimetres. Every number in a shape, feed, via or dielectric layer can be an expression of the parameters, so changing one parameter moves everything that depends on it. The Geometry view redraws as you type.

Start from a template

File > New from template offers seven antennas:

Template	What it is
Printed IFA	A classic inverted-F on the board edge, ground on both layers, fed in-plane across a gap.
Reference MIFA (mil drawing)	The widely used meandered IFA drawn in mils: CPW feed, three meanders and a shorting via.
TI AN043 MIFA	The meandered IFA of TI application note AN043 (CC2511 USB dongle), with TI's dimension names.
TI DN007 IFA	The inverted-F of TI design note DN007 (CC2430DB), with TI's dimension names.
CC-Antenna-DK #5 (868 MHz)	The L-shaped monopole of TI's antenna kit CC-Antenna-DK.
CC-Antenna-DK #6 (868 / 2440 MHz)	The dual-band meander monopole of the same kit.

Template	What it is
CC-Antenna-DK #10 (868 MHz)	The small L-shaped monopole of the same kit.

The same projects are also in the **Samples** folder of the installation. Dimensions that the TI documents do not give (board thickness, ground size) are parameters you can set.

Parameters

Each row has a **Name**, an **Expression** in mm and a **Description**. The **Value** column shows the result.

Expressions follow MATLAB syntax:

- Numbers, other parameters, + - * / ^ (and .* ./ .^), and parentheses.
- pi and the functions sin cos tan asin acos atan sqrt abs exp log round floor ceil min max.
- Example: $X_M = X_0 + LF - W/2$.

A parameter may use any other parameter, in any order, as long as there is no loop.

Paste table reads a dimension table copied from a datasheet or a spreadsheet: one Name value [unit] per line, such as L1 3.94 mm or W2 = 20 mil. The units mm, mil, μm (or um), cm, in and m are converted to mm, and a decimal comma is accepted. Existing parameters are updated by name and new ones are added.

Tune slider: select a parameter whose expression is a plain number, then drag the slider under the table. The geometry follows as you drag. The range is the parameter's Min and Max, or $\pm 50\%$ of its value when they are empty. Min and Max also set the range of Simulate > Tune to frequency (section 7).

Shapes

Each shape has a **Name**, an **On** box (untick it to leave the shape out without deleting it), a **Layer** and a **Kind**:

Kind	Fields used
Rectangle	Centre X , Y ; Length (x) and Width (y) , as in MATLAB; Rot° about the centre.
Circle	Centre X , Y and Radius .
Polygon	Points as x1, y1; x2, y2; ..., each coordinate an expression; Rot° about the first point.
Meander	See below.

A **meander** starts at (X, Y) on the centre line of the trace. It steps **Pitch** along +x, then runs a leg of **Length** along y (a negative length goes down first), and turns back for each of the **Folds** legs. **Width** is the trace width, and **Rot°** turns the whole meander about (X, Y).

Shapes on the same layer are merged, so overlapping copper is joined.

Hover over a column header of the Shapes tab to see what the column means for each kind of shape. A click on a shape in the Geometry view opens its row.

The Board layer: shapes on the layer called **Board** are not copper. Together they set the outline of every dielectric layer. Without a Board shape there is no dielectric, and the copper is simulated in air.

Feeds

The feed is where the radio connects. **Port 1** is excited; any other feed is terminated in its impedance.

- **Vertical:** a port at (X, Y) from the **Signal layer** down to the **Ground layer**, through the substrate. Use it when the antenna is fed from a via or a pad over the ground.
- **InPlane:** a port in the plane of the signal layer, from (X, Y) to (X2, Y2), for a feed across a gap in the copper. The two points must share an x or a y.
- **Z0 (Ω):** the reference impedance, normally 50.

An empty Signal layer means the top metal layer, and an empty Ground layer the bottom one.

Vias

A via joins two metal layers at (X, Y), typically the short of an inverted-F. Leave $\emptyset$ empty for a thin wire, or give the drill diameter in mm to model the barrel as a post of the same perimeter.

Stackup

The stackup is on the **Board & simulation** tab, listed from the top of the board to the bottom:

- **Metal** layers are copper sheets of zero thickness (perfect conductors). Shapes, feeds and vias refer to them by name.
- **Dielectric** layers have a **Thickness** (mm), a relative permittivity ϵ_r and a loss tangent $\tan\delta$. Typical values are ϵ_r 4.2–4.6 and $\tan\delta$ 0.015–0.02 for FR-4, and ϵ_r 3.55 and $\tan\delta$ 0.0027 for Rogers RO4003C.

Use **Add metal**, **Add dielectric**, **Up**, **Down** and **Remove** to change the stack. A higher ϵ_r lowers the resonance; $\tan\delta$ mainly lowers the efficiency.

Model errors

Problems such as an unknown parameter, a loop between parameters, a shape on a missing layer, or a mesh that cannot be built are listed in red under the editor tabs. Fix them before you run.

5. Importing designs

An import replaces the open project (you are asked to save it first), and the new project is untitled until you save it. Any warnings are shown in a message box and repeated on the Log tab; read them before simulating.

PCB boards: Eagle, Fusion, KiCad and Altium

File > Import PCB board (Ctrl+I) reads a whole board, so you can simulate the antenna with the real ground plane and the copper around it on your layout.

	Eagle .brd	KiCad .kicad_pcb
Versions	Eagle 6 to 9, Fusion Electronics	KiCad 5 to 10
Copper	Wires, polygons, rectangles, circles, and the pads and SMDs of placed parts, on layers 1 to 16	Tracks, arcs, filled zones, graphic copper and footprint pads, on F.Cu, In*.Cu and B.Cu
Board outline	Dimension layer (20)	Edge.Cuts
Vias	Vias and plated holes	Vias and plated holes
Stackup	Layer setup and thicknesses from the design rules	Board Setup > Physical Stackup

Autodesk Fusion Electronics (.fbrd, or a .f3z archive that holds one): the board is stored inside as Eagle XML and is read like an Eagle board.

Altium Designer (.PcbDoc): the copper, the vias and plated holes, the board shape, and the layer stack with the thickness and ϵ of each dielectric.

After the import, a window asks for what the file does not say: the dielectric material, the feed when several pads qualify, and the signal and ground layers.

What to check after an import:

1. **Stackup** (Board & simulation tab). Eagle files do not store ϵ or $\tan\delta$, so the dielectrics are set to FR-4 (4.4 / 0.02). A KiCad board without a physical stackup gets FR-4 (4.5 / 0.02) split evenly between the copper layers. Enter your real material.
2. **Feed** (Feeds & vias tab). The importer puts a vertical feed on a pad named ANT, RF or FEED, or, in KiCad, on the signal pad of a footprint whose reference starts with AE or ANT. The feed runs from the pad down to the nearest copper layer under it. An antenna pad often sits just past the ground edge: then the feed moves along the pad's copper (up to 3 mm) to where the ground starts, and a warning says so. If no such pad exists, add the feed yourself.
3. **Frequency range** (Board & simulation tab).

Other things the importer does:

- **No closed board outline:** the board is taken as the rectangle around the copper, and a warning gives its size. Plated holes count by their centre, so castellated holes on the edge are cut through the middle as on the real board. Draw the outline in your CAD tool for the exact shape.
- **Polygon pours (Eagle)** are stored as outlines in Eagle. They are clipped to the board and kept clear of other nets, which is close to, but not exactly, what Eagle pours.
- **Unfilled zones (KiCad)** are approximated. Fill all zones in KiCad (press B) and save before importing to get the exact copper.
- **Copper outside the board** (parts parked off the board, edge overhangs) and vias whose centre is off the board are left out.

- Text on copper layers is not imported. Non-plated holes (mounting holes, connector pegs) are kept clear in the copper and drawn in the 3D views, but not cut out of the dielectric in the simulation.
- **Coordinates:** the board is moved so that its bottom-left corner is at (0, 0), with y up. For KiCad, whose y axis points down, the Log gives the conversion from KiCad coordinates.

Large boards take a few seconds to import and make large meshes. To speed up the simulation, untick the **On** box of shapes far from the antenna, or simplify the board in your CAD tool before you import it.

Gerber and drill files

File > Import Gerber and drill files reads the fabrication files of a board: the Gerber copper layers, the board outline and the Excellon drill files, as a .zip, the job file (.gbrjob) of a folder, or files you select. A window shows what each file was taken for (copper, outline, plated or non-plated drills) and lets you change it before importing. Without a job file the stackup is a guess: check it after the import.

MATLAB pcbStack scripts

File > Import MATLAB pcbStack script reads the .m script that MATLAB's PCB Antenna Designer exports. It reads the pcbStack object with its rectangles, circles, triangles and polygons, the dielectric layers, and the feed and via locations.

- MATLAB works in metres and this program in millimetres; lengths are converted.
- Numeric workspace variables become parameters, so the imported design keeps its dimension names.
- Shape additions are kept; subtractions are not supported, and a shape with a cut-out is kept without it (a warning says which).
- A balanced MATLAB feed (delta gap) on one layer is imported as a vertical port; check it on the Feeds & vias tab.

After the import, check the frequency range on the Board & simulation tab.

6. Simulation settings

The settings are on the **Board & simulation** tab, under the stackup, and are saved with the project. Hover over any label for an explanation. The status bar shows the size of the mesh they give, for example Mesh 96×120×42 = 0.48 M cells, min 0.050 mm.

Fast, Standard and Accurate presets

- **Fast estimate:** for a first look at the VSWR. Standard, then cells another 1.5 times larger, two cells across the substrate and a stop at -20 dB. Several times faster than Standard; the resonance can be a few percent away from the accurate result.
- **Standard** (tuning): fine cells 1.6 times larger, merge distance doubled, one cell less across the substrate, $\lambda/4$ of automatic air instead of $\lambda/2$, stop at -30 dB, and no radiation pattern. On the TI DN007 IFA it runs 2.4 times faster, with the resonance 0.6% higher.
- **Accurate** (final): puts back the values you had before choosing Standard or Fast. Without them, it uses the defaults below.

Choose the preset in the **Preset** list; the line under it repeats what the preset sets. Your own values are kept, and Accurate puts them back. Use Fast or Standard while you tune the dimensions, then Accurate for the final result.

Parameters Shapes Feeds & vias Board & simulation Matching

Stackup, top to bottom (dielectric values accept expressions)

Name	Kind	Thickness (mm)	ϵ_r	$\tan\delta$
Top	Metal			
Substrate	Dielectric	0.8	4.4	0.02
Bottom	Metal			

Add metal Add dielectric Up Down Remove

Simulation (openEMS FDTD)

Preset: Accurate (final)
Accurate: the settings below are used as they are.

Start frequency (GHz): 1.8
Stop frequency (GHz): 3.2
Frequency points: 401
Fine mesh on metal (mm): 0.4
Merge lines closer than (mm): 0.05
Cells across substrate: 4
Mesh grading ratio: 1.3
Air margin (mm, 0 = $\lambda/2$): 0
Boundary: PML_8
Max timesteps: 300000
End criteria (dB): -40
Threads (0 = auto): 0
Radiation pattern: ☒ compute (near-to-far field)
Pattern frequency (GHz, 0 = ce): 2.45
Pattern step (°): 2
Current distribution: ☒ record (surface current on the copper)

Metal layers are zero-thickness PEC sheets between the dielectrics; $z = 0$ is the bottom of the stack. Board shapes set the outline of every dielectric layer. Units are millimetres; MATLAB scripts are converted from metres on import.

The Board & simulation tab: the stackup, the preset and the settings.

Settings

Setting	Default	What it does
Start / Stop frequency (GHz)	2 / 3	The sweep shown in the results. The stop frequency also sets the largest mesh cell ($\lambda/20$), so a higher stop frequency means a finer mesh and a longer run.
Frequency points	401	Points in the result curves. Only affects post-processing, not the run time.
Fine mesh on metal (mm)	0.25	Largest cell around the antenna copper, feeds and vias. Halving it gives about 4 times the cells and twice the timesteps. Ground planes get larger, graded cells.

Setting	Default	What it does
Merge lines closer than (mm)	0.05	Mesh lines closer than this become one. Very small cells force a very small time step. Lower it only to resolve a thin gap or trace. Feed ports always sit on a mesh line.
Cells across substrate	4	Cells through the thickest dielectric; thinner layers get proportionally fewer, at least 2.
Mesh grading ratio	1.3	How fast cells may grow away from the antenna (1.05 to 2). Lower is smoother and more accurate but adds cells.
Air margin (mm)	0 (automatic)	Distance from the board to the absorbing boundary. Automatic is $\lambda/2$ at the centre frequency, at least 20 mm. Too little air distorts the result.
Boundary	PML_8	The absorbing boundary. PML_8 absorbs well. MUR is simpler, reflects more and needs more air.
Max timesteps	300 000	Safety limit. A run that reaches it usually has a very high-Q structure or a feed that excites nothing.
End criteria (dB)	-40	The run ends when the field energy has fallen this far below its peak. -40 dB is enough for a matched antenna; -50 dB gives cleaner curves for high-Q or badly matched antennas.
Threads	0 (automatic)	CPU threads openEMS uses. Automatic is one thread per performance core: openEMS waits for its slowest thread at every timestep, so using the efficiency cores and hyper-threads too makes it slower (on an i7-14700, 8 threads run 1.6 times faster than all 28). This is why the CPU load stays well below 100% during a run.
Radiation pattern	on	Records the fields on a box around the antenna and computes the far field (section 9). S11 is the same either way.
Pattern frequency (GHz)	0 (centre of the sweep)	The frequency of the pattern and of the current distribution. Set it before running: another frequency needs a new run.
Pattern step (°)	2	Angular step of the far field. 1° takes 4 times as long to compute as 2°.
Current	on	Records the surface current on the copper at the

Setting	Default	What it does
distribution		pattern frequency (section 10). Adds little to the run time.

Making a run faster

The run time grows with the number of cells times the number of timesteps. In order of effect:

1. Use the Fast or Standard preset while tuning.
2. Raise the **Fine mesh on metal** a little (0.3–0.4 mm is often fine for a 2.4 GHz IFA).
3. Raise **Merge lines closer than** if the mesh has very small cells (shown as `min` in the status bar).
4. Narrow the sweep: a lower stop frequency gives larger cells.
5. Untick **Radiation pattern** and **Current distribution** when you only need S11.
6. For imported boards, untick the shapes far from the antenna.

Do not reduce the air margin or loosen the end criteria to save time: both change the result.

7. Running a simulation

Press F5 or click ► **Run simulation**. The program writes the model and the mesh, starts openEMS and switches to the Log tab. ■ **Stop** ends the run at any time. || **Pause** suspends openEMS: it keeps its memory but uses no CPU, and ► **Resume** goes on where it stopped. Closing the program ends a paused run.

How a run works

openEMS solves Maxwell's equations step by step in time (FDTD). It sends a short pulse covering the whole frequency band into the feed, then lets the field ring down. The pulse energy is radiated by the antenna or lost in the board, so the energy in the model falls. When it has fallen by the **end criterion** (–40 dB by default) the field is gone and the run stops. The frequency response is the Fourier transform of the voltage and current recorded at the feed.

That is why the run time depends on the antenna: a well-matched antenna radiates its energy quickly, while a badly matched or high-Q one rings longer.

Progress

The top of the Log tab shows:

- **The phase:** writing the model and mesh, setting up the FDTD operator, exciting the antenna, waiting for the energy to decay, reading the port results, and computing the far field.
- **A progress bar and the time left.** While the pulse is going in, the time left is not yet known. Once the energy starts to fall, it is estimated from how fast it falls.
- **The energy chart:** the energy in dB below its peak, against time, with the end criterion as a line. The run ends when the curve reaches the line.
- **Details:** the energy reached, the timestep, the pulse length, and the speed in million cells per second.
- The CPU and memory use of the PC, refreshed every few seconds.

The phase and percentage are also shown in the status bar and on the program's taskbar button, so you can follow a run while working in another window. Below the progress panel is the full openEMS output.

When it finishes

The program reads the results, shows the **S11** tab and writes a summary in the toolbar: the resonance frequency, the best S11, the input impedance at resonance and the -10 dB bandwidth.

The simulation folder

Each project simulates in its own folder, named after the project with `_sim` added:

- Next to the project file, for a saved project.
- In `%TEMP%\LW RF Studio`, for an unsaved project or one opened from a read-only place, such as the installed samples.

The folder holds the openEMS model and output, the log (`openEMS.log`), and the results as `s11.csv`, `antenna.s1p` and `pattern.csv`. A new run of the same project overwrites it.

Results saved with the project

File > Save also writes the last results into the project file: S11 and impedance, the radiation pattern, the current distribution, the reference trace and the matching network. Opening the project shows them again, even without the simulation folder, for example on another PC. If the design has changed since that simulation, the status bar says so: run it again to update the results. A project with a radiation pattern grows by about 0.5 MB.

After a simulation the project is marked as changed (* in the title bar), so you are asked to save the results when you close it. A project file without saved results takes them from its simulation folder, if it still exists.

Simulate > Load results from simulation folder shows the results of any earlier run of the open project. It also computes the radiation pattern if the run recorded the fields but `nf2ff` was not run.

If the run stops with an error

- **“openEMS ignored the feed port”** or **“No energy entered the model”**: the feed does not touch the copper, or it is shorted. The run is stopped early instead of running to the timestep limit. Check the feed position and layers on the Feeds & vias tab.
- **“openEMS exited with code ...”**: see `openEMS.log` in the simulation folder.
- **“Fix the model errors first”**: the model has errors, listed in red under the editor tabs.

See also section 15.

Tuning to a frequency

Simulate > Tune to frequency finds the dimensions that put the antenna at your frequency. It runs a series of simulations and changes two parameters between them:

- **Length parameter**: the one that sets the resonance, usually the length of the radiating arm. It is moved until the resonance, the lowest $|S_{11}|$, is at the target. After the first run it is scaled by

- **Match parameter** (optional): the one that sets the impedance at resonance, for example the feed-to-short spacing of an IFA. It is moved to the lowest $|S_{11}|$ at the target: one step on each side, then the bottom of the parabola through the three results.

1. Check that the target frequency is inside the sweep (Board & simulation tab), and that the two parameters are plain numbers, ideally with a Min and a Max in the Parameters tab. Parameters that depend on them by formula follow automatically.
2. Open Simulate > Tune to frequency. Check the target, the two parameters and their ranges (without Min and Max: $\pm 30\%$ for the length and $\pm 60\%$ for the match), the speed and the maximum number of runs.
3. Click Start. The table lists every run: the values, the resonance, and S11 and VSWR at the target. Stop ends the tuning after the current run.
4. The best run is in bold. Click Apply best to write its values into the project; nothing changes before that.
5. Run the simulation with the Accurate preset for the final check: the Fast and Standard presets can be a few percent off.

Tuning the Printed IFA template to 2.45 GHz: the length step lands on the target, and the match step finds nothing better.


If a parameter reaches its bound before the resonance reaches the target, the tuning stops and says which bound to widen. The same tuning is available on the command line (section 13).

8. Results: S11, impedance, VSWR and Smith chart

Four tabs show how well the antenna is matched to the radio, across the sweep. All are referred to the feed impedance Z_0 (normally $50\ \Omega$).

Tab	Shows	What to look for
S11	The reflection coefficient $ S_{11} $ in dB, with a dotted line at -10 dB and a marker at the minimum.	The dip is the resonance. Below -10 dB , less than 10% of the power is reflected.
Impedance	The input resistance $\text{Re}(Z_{\text{in}})$ and reactance $\text{Im}(Z_{\text{in}})$, with dotted lines at Z_0 and at $0\ \Omega$.	At a good match $\text{Re}(Z_{\text{in}})$ is near Z_0 and $\text{Im}(Z_{\text{in}})$ crosses 0 .
VSWR	The voltage standing-wave ratio, with a dotted line at 2 .	VSWR below 2 is about the same as S_{11} below -10 dB .
Smith chart	The input reflection on the Smith chart.	A good match passes close to the centre.

The toolbar summary gives the resonance frequency, the best S11, the impedance at resonance and the -10 dB bandwidth.

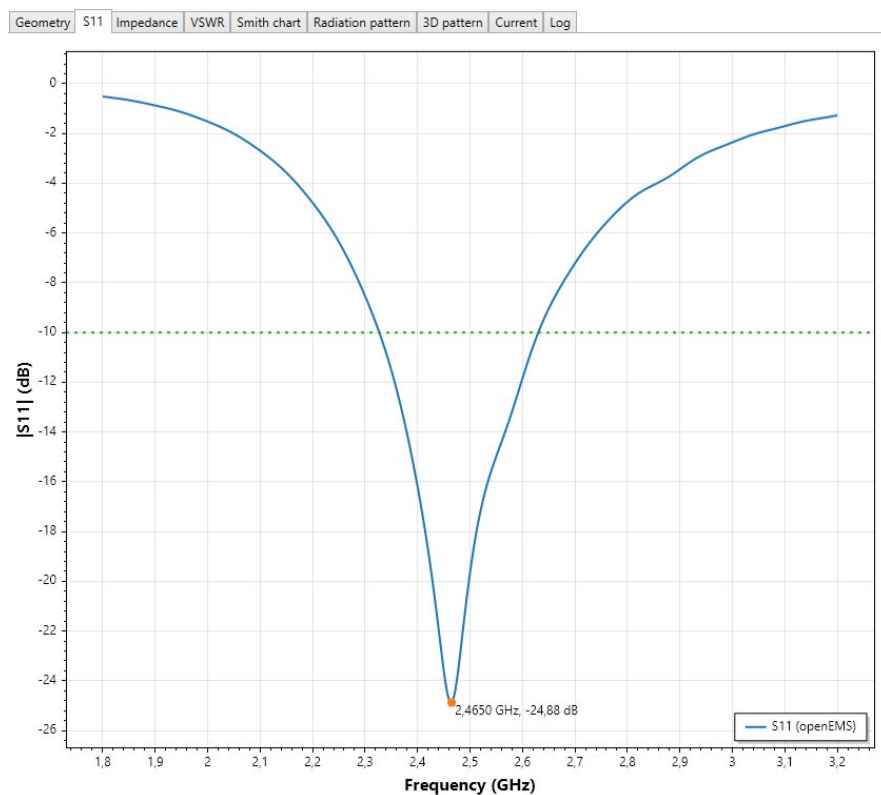

The S11 tab after a simulation, with the marker at the minimum.

Reading values on the charts

- **Data tips:** click near a curve to pin a tip with the values of the nearest point (frequency, S11, impedance, VSWR). Ctrl+click adds another tip. Click in empty space, or press Esc, to remove them.
- **Zoom and pan:** drag to pan, and turn the mouse wheel to zoom. Middle-click to fit the curves again.
- **Save or copy a chart:** right-click it.

Comparing with a measurement

Simulate > Load reference S11 overlays a measured trace, for example from a VNA, as a second curve. It reads:

- A Touchstone .s1p file.
- A .csv file with the frequency in the first column (in Hz, or GHz if all values are below 1000) and S11 in dB in a column named S11_dB, or else the second column.

The reference stays on the charts until **Simulate > Clear reference**.

Matching network

The **Matching** tab, with the editors on the left, shows the effect of an L/C network between the antenna and the radio without a new simulation. Set the parts in three places, as on a VNA's L/C match screen: a **source shunt** part on the radio side, a **series** part, and a **load shunt** part across the antenna. For each, choose None, L or C and enter the value in nH or pF. The charts on the right update as you type, and the tab shows the matched result.

Component values: choose **Ideal values**, or the **Würth design kits**: WE-MK 0402 inductors (kit 744784, 33 values from 1 to 270 nH) and WCAP-CSRF 0402 NP0 capacitors (kit 885390, 36 values from 0.2 to 27 pF). With the Würth kits, each value box lists the kit values, the Würth order code is shown next to it (or “not in the kit”), and switching to the kits moves every L and C to the nearest kit value. The values and order codes come from the kit datasheets; check the current datasheets before ordering.

Automatic proposal: enter the frequency in **Match at** (the pattern frequency by default) and click **Propose**. The tab lists L-networks that match the antenna to Z0 there, as SmithMatch's Auto-match does:

- With **ideal values**, the exact solutions: a shunt part next to the antenna then a series part, or a series part then a shunt part, each in its low-pass and high-pass form where it exists.
- With the **Würth kits**, every layout (one part, or a shunt and a series part in either order, each an L or a C) is tried with every kit value, and the best pair for each layout is listed. Pairs whose second part hardly helps, and parts that barely improve on the bare antenna, are left out.

Each proposal gives its parts (with the order codes), S11 at the chosen frequency, and the –10 dB band it reaches on the simulated curve, so you can prefer a wider band to a deeper dip. Click a proposal to put it in the three places and try it on the charts.

SmithMatch..., next to **Propose**, opens SmithMatch with the simulated antenna impedance at the **Match at** frequency as its start datapoint, and sets its Z0 and frequency to match. Use it to design the network by hand on the Smith chart (section 12). It needs a simulation result.

The tab also has a **Ladder** field with the same network as text, listed from the antenna towards the radio, which takes networks with any number of parts. Type it and press Enter:

```
shuntC=1.8p; seriesL=6.8n
```

This is a 1.8 pF capacitor across the antenna port, followed by a 6.8 nH inductor in series towards the radio.

- Each component is **series** or **shunt**, followed by **L** or **C**, **=** and a value.
- Values take the prefixes **f**, **p**, **n**, **u**, **m**, **k** and **M**, for example **6.8n** (H) or **1.8p** (F).
- The components are ideal (no losses or parasitics).

The charts then show the curves with matching next to the originals, and the toolbar summary adds the matched resonance and bandwidth. **Clear** removes the network. The network is saved with the project.

RF calculator

Tools > RF calculator converts the figures of a match into each other and estimates lengths. It stays open beside the main window.

- **Mismatch:** type a return loss, a VSWR or the reflection coefficient $|\Gamma|$, and the other two follow, with the reflected power, the transmitted power and the mismatch loss. An S11 in dB is accepted too: -10 and 10 are the same match.
- **Quarter-wave estimate:** the frequency at which a length is a quarter wavelength, or the length for a frequency. The effective permittivity ϵ_{eff} is 1 in air; the button $(\epsilon_r + 1) / 2$ of the board uses the substrate of the project, the most a printed antenna sees. On a PCB the real length is often 15 to 30% off this estimate, because the ground plane, the shape and the parts nearby move the resonance.
- **Scale a design:** moves a known length to another frequency (length $\times$ known frequency / new frequency). This is more reliable than the quarter-wave estimate, because the board, the ground and the shape act about the same at both frequencies. Scale only the element that sets the resonance, and check the result by simulation.

 RF calculator
 ✕

Mismatch Type a return loss, a VSWR or $|\Gamma|$; the others follow.

Return loss (dB)	9.542
VSWR (:1)	2
Reflection coefficient $ \Gamma $	0.3333
Reflected power	11.11 %
Transmitted power	88.89 %
Mismatch loss	0.512 dB

Quarter-wave estimate Type a length or a frequency.

Length (mm)	30.6
Frequency (MHz)	2449.28
Effective permittivity ϵ_{eff}	1 (\epsilon_r + 1) / 2 of the board
Wavelength λ	122.4 mm

Only a first guess: on a PCB the ground plane, the shape (shorting stub, meander) and nearby parts move the resonance, so the real length is often 15 to 30 % off. Scale a known design below, or use Simulate > Tune to frequency for the length on your board.

Scale a design Move a known length to another frequency.

Known length (mm)	20.98
at frequency (MHz)	2450
New frequency (MHz)	2400
New length	21.417 mm (+2.1 %)

More reliable than the quarter-wave estimate: the board, the ground and the shape act about the same at both frequencies. Scale only the element that sets the resonance, and check the result by simulation.

Close

The RF calculator.

9. Radiation pattern

The radiation pattern shows how the antenna radiates in each direction. It needs **Radiation pattern** ticked on the Board & simulation tab before the run, and it is computed at the **Pattern frequency** only (the centre of the sweep if left at 0). During the run openEMS records the fields on a box around the antenna; afterwards its nf2ff tool turns them into the far field. To see the pattern at another frequency, change the pattern frequency and run again.

The 2D pattern

The **Radiation pattern** tab shows three polar cuts through the pattern, in the XY, XZ and YZ planes. The heading line gives:

- The frequency.
- The **directivity** (dBi): how strongly the antenna concentrates its radiation in the best direction.
- The **efficiency**: the share of the accepted power that is radiated. The rest is lost in the copper and the board.
- The **peak gain** (dBi) and its direction, as θ (from the z axis) and ϕ (from the x axis in the board plane).

Each cut shows three curves: **vertical** (E_θ), **horizontal** (E_ϕ) and **total**. Vertical and horizontal are the polarisations seen with the board lying flat, z up. Click a curve for a data tip.


Axes: x runs along the board, y from the ground towards the antenna, and z is normal to the board.

Gain here is computed from the power the antenna accepts: it includes the losses in the copper and the dielectric, but not the mismatch at the feed. A poorly matched antenna radiates less in practice than its gain suggests, so check S11 too.

The 3D pattern

The **3D pattern** tab draws the gain in every direction as a coloured surface, with the antenna inside it. The distance from the centre and the colour both show the gain, over 40 dB below the peak; deeper nulls are drawn at the centre.

- **Gain:** show the **Total**, the **Vertical ($E\theta$)** or the **Horizontal ($E\phi$)** gain.
- **Antenna:** show or hide the board and copper in the middle.
- **See-through:** makes the pattern transparent, so you can see the antenna through it.
- **Mouse:** drag to rotate, turn the wheel to zoom, and double-click to return to the start view. Click the pattern to read the total, vertical and horizontal gain in that direction.
- **Save image:** saves the view as a PNG file.

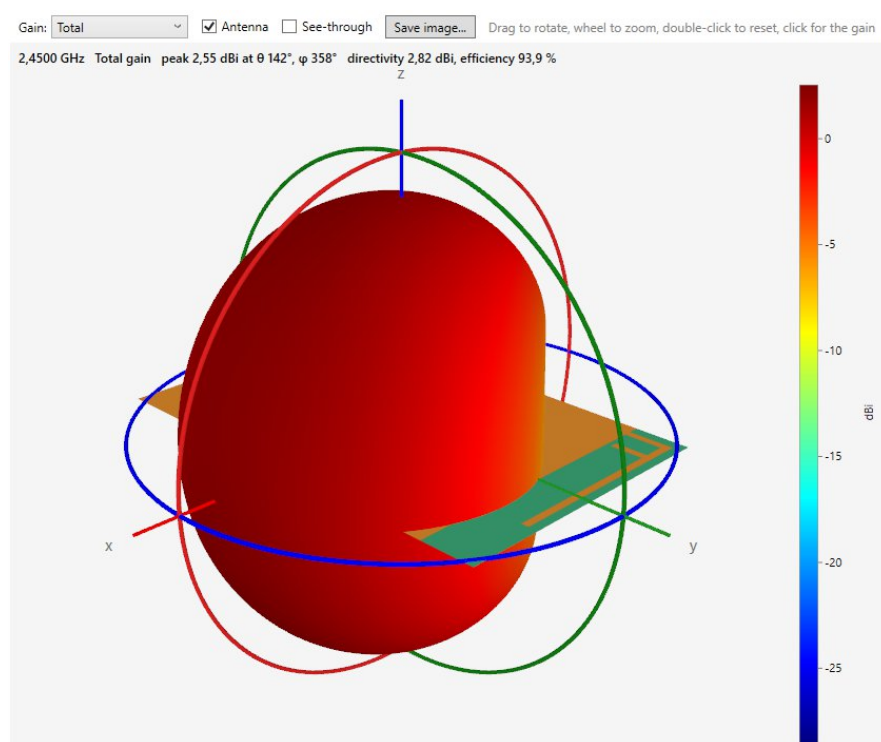

The 3D pattern of the Printed IFA at 2.45 GHz.

10. Current distribution


The **Current** tab shows the surface current flowing on the copper, like MATLAB's `current()` function. It tells you which parts of the antenna carry the current and therefore do the radiating, where the current crowds, and how far it spreads into the ground plane.

It needs **Current distribution** ticked on the Board & simulation tab before the run. Like the radiation pattern, it is recorded at the **Pattern frequency** only. It adds little to the run time.

Reading the view

Each copper layer is drawn in 3D and coloured by the magnitude of the surface current $|J|$, on a jet colour scale (blue for weak, red for strong). The current is in A/m for 1 V at the feed. The heading line gives the frequency and the highest current, and the layer it is on.

On a resonant inverted-F the current is highest at the feed and the short, and falls to nearly zero at the open end of the arm.

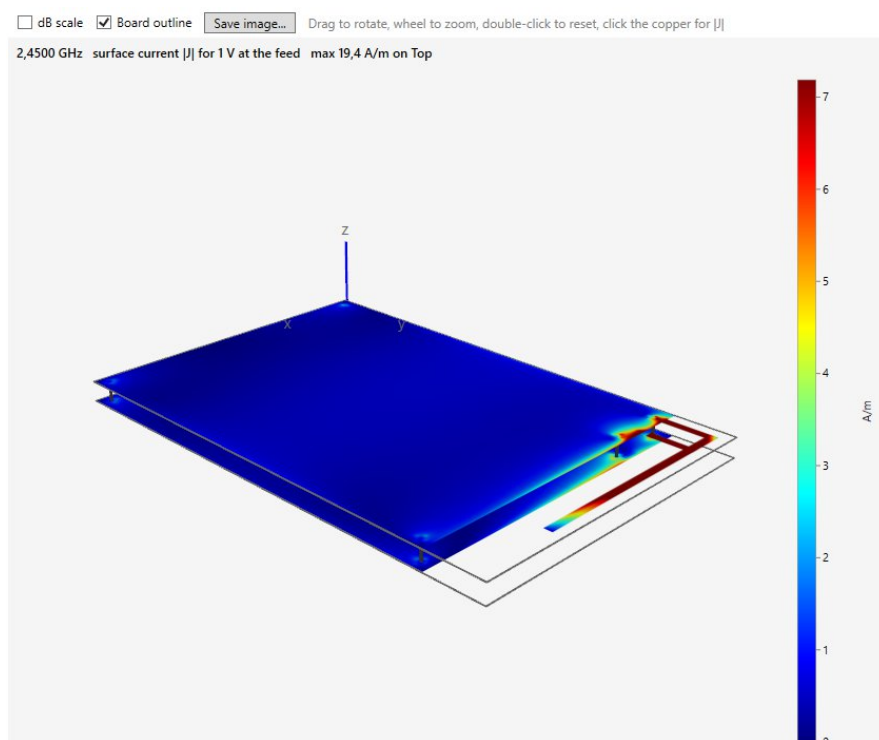

The surface current on the Printed IFA: strongest on the arm near the feed and the short.

Controls

- **dB scale:** colours by $20 \cdot \log_{10}(|J| / \text{maximum})$, down to -40 dB. This shows the weak currents too, for example on the ground plane.
- **Board outline:** shows or hides the board edge.
- **Mouse:** drag to rotate, turn the wheel to zoom, and double-click to return to the start view. Click the copper to read the layer, the position and $|J|$ at that point.
- **Save image:** saves the view as a PNG file.

How it is computed

openEMS records the magnetic field just above and just below each copper layer. The surface current is the jump in the magnetic field across the copper sheet. This is accurate on large copper areas and along traces. Very close to a via or the feed, where the field changes fast over one cell, treat the value as approximate.

11. Exporting

All exports are on the **File** menu.

The antenna as a PCB part

Once the antenna works, export it as a part to place on your board.

	KiCad footprint (.kicad_mod)	Eagle library (.lbr)
Opens in	KiCad 7, 8 and 9	Eagle 6 to 9 and Fusion Electronics
Copper	Filled polygons on F.Cu, In*.Cu and B.Cu	Rectangles and polygons on layers 1 (Top), 2–15 (inner) and 16 (Bottom)
Feed	SMD pad 1	SMD pad, pin FEED
Vias	Plated holes, pad 2	Plated pads, pin GND
Also	Pads 1 and 2 are a net tie, because the antenna shorts the feed to ground on purpose	A two-pin symbol (FEED, GND) and a device; the board outline on layer 51 (tDocu)

In both, the origin of the part is the feed point. The project name names the part, and the project description is written into it. All copper in the project is exported, including the ground planes. If your board has its own ground, untick the **On** box of the ground shapes before exporting, or delete them from the part afterwards.

Vias without a diameter are given a default drill. Check the drill and pad sizes against your PCB rules before ordering boards.

Export Altium footprint library (.PcbLib) writes the same part for Altium Designer: the copper as regions, the feed as pad 1 and the vias as pad 2.

Results

- **Export results (CSV / Touchstone):** the simulated S11 as a Touchstone .s1p file, for a circuit simulator or VNA software, or as a .csv file with the columns f_Hz, Re_Zin, Im_Zin, S11_dB, VSWR.
- **Export radiation pattern (CSV):** the gain at every angle, with the columns theta_deg, phi_deg, G_theta_dBi, G_phi_dBi, G_total_dBi. The first line gives the frequency, the directivity and the efficiency.

PCB Antenna Lab also writes these files to the simulation folder after every run: s11.csv, antenna.s1p and pattern.csv.

Images

Right-click a chart to save or copy it. The 3D pattern and the Current views have a **Save image** button that saves a PNG file.

Reports

File > Print report (Ctrl+P) and **File > Export report as PDF** make a report of the design, one view per A4 page: the geometry, the parameters and settings, S11, impedance, VSWR, the Smith chart, the radiation patterns and the current distribution. A window lets you choose the pages.

openEMS model

Export openEMS XML writes the model and its mesh (antenna.xml) to a folder you choose, without running it. Use it to run openEMS yourself, for example on another computer, or to inspect the model in openEMS's AppCSXCAD viewer.

12. SmithMatch

SmithMatch designs an L/C matching network on an interactive Smith chart. You enter the impedance of the load, for example the simulated antenna or one measured with a VNA, add parts to a pi network and see live how each part moves the impedance towards Z0. Values can be limited to the parts of the Würth Elektronik design kits, so the network can be built on the bench at once.

Opening SmithMatch

- **Tools > SmithMatch** (Ctrl+M) in PCB Antenna Lab opens it in its own window, so you can keep both in view. It needs no simulation.
- **SmithMatch...** on the Matching tab (section 8) sends the simulated antenna impedance at the **Match at** frequency. It becomes the start datapoint, and Z0 and the frequency are set to match.

Closing PCB Antenna Lab also closes SmithMatch, which first asks to save an unsaved design.

The window

Area	What it holds
Smith chart (left)	Impedance (Z) and admittance (Y) grids scaled to Z0, the datapoints, the path of the network and the + / – arrows. The corner gives the VSWR and return loss of the whole network.
Toolbar	Mouse adds DP, Keyboard DP..., Z0 [Ω], Freq [Hz], Würth kit values only , the part buttons (Load , Serie and Source , each L or C), Auto-match and VSWR sweep...
Datapoints	The impedances entered, with their Q and frequency. Tick Start on the one to match; right-click to delete one.
Schematic	The network drawn as a circuit with values and Würth order codes, the tuning slider, and the result: Zin, Γ , VSWR and return loss.
Cursor	Return loss, VSWR, Q, Γ (magnitude and angle), Z and Y at the mouse position, with Z0 and the frequency.

Turn the mouse wheel on the chart to zoom; **View > Zoom 1:1** resets it, and the **View** menu shows or hides each grid. Values accept engineering suffixes, such as 2.45G, 3.3n and 1.5p.

Designing a network

The network is a fixed pi: a **Load** part to ground across the antenna, a **Serie** part, and a **Source** part to ground on the radio side. Each place holds an L, a C or nothing. This is the same layout as the load shunt, series and source shunt places on the Matching tab.

1. Set **Z0** and the frequency in the toolbar.
2. Add the load: tick **Mouse adds DP** and click the chart, click **Keyboard DP...** to type R and X, or send it from PCB Antenna Lab.
3. Click a part button. A green circle shows every point that part can reach, and the value follows the mouse along it. Click to fix the value, or press Esc to cancel.
4. Or click **Auto-match**. It lists every L-network (low-pass and high-pass) that matches the start datapoint to Z0, with the VSWR each one reaches. Select one to preview it on the chart, then click **Use**.
5. Tune: click a part in the schematic and drag the slider; double-click a part to type its value, right-click to remove it. The + and – arrows on the chart show which way each point moves when a value goes up or down, which helps when tuning on the bench.
6. Check the bandwidth with **VSWR sweep...**, then save and print.

The parts are ideal: no losses, parasitics or self-resonance. To see a SmithMatch network on the simulated curves, enter its parts on the Matching tab.

Würth design kits

Tick **Würth kit values only** to snap every value to the nearest part of the kits. They are the same kits as on the Matching tab:

Parts	Kit	Values
Inductors, WE-MK 0402	744784	33 values, 1 to 270 nH
Capacitors, WCAP-CSRF 0402 NP0	885390	36 values, 0.2 to 27 pF

With the kits on, the slider steps from one kit value to the next, Auto-match rounds its values to kit parts, and the order codes are shown in the schematic, the Auto-match list and the printout. Check the current Würth datasheets before ordering.

VSWR sweep, files and printing

- **VSWR sweep...** draws the VSWR against frequency over a range you choose ($\pm 20\%$ around the design frequency by default), with the minimum VSWR and a cursor readout. The load is modelled as its resistance plus the L or C that gives its reactance at the design frequency, so the sweep is approximate far from that frequency.
- **File > New** (Ctrl+N), **Open** (Ctrl+O), **Save** (Ctrl+S) and **Save as**: designs are saved as **.smith** files.
- **File > Export image** saves the chart as a PNG file.
- **File > Print** (Ctrl+P) and **Print preview** open the same dialog with a live preview. Choose the chart layers (Z and Y grids, labels, traces, arrows, datapoints), the sections (schematic, datapoints, components, results, VSWR sweep), and portrait or landscape. The chart can fill page 1 on its own.

13. Command line

LWRFStudioCli.exe, in the installation folder, does the work of PCB Antenna Lab without the window. Use it for scripts, batch runs and parameter sweeps. It runs during the trial or with a license. After the trial, without a license, only license, status, vswr and feed-preview run (the last three are used by the KiCad plugin); the others stop with exit code 3.

Run it from a command prompt in the installation folder, or add that folder to the PATH. Without arguments it lists the commands.

Command	What it does
new <template#> <project.json>	Creates a project from a template. Without arguments, lists the templates.
import <script.m> <project.json>	Imports a MATLAB pcbStack script.
import-pcb <board> <project.json>	Imports an Eagle .brd, Fusion .fbrd, KiCad .kicad_pcb or Altium .PcbDoc board.
import-gerber <folder, set.zip or files> <project.json>	Imports a Gerber set with its Excellon drills.
check <project.json>	Evaluates the geometry and the mesh and prints statistics.
geom <project.json> <out.png>	Draws the layers, feeds and vias, seen from above.
xml <project.json> <dir>	Writes the openEMS model to a folder.
run <project.json> <dir> [openEMS.exe]	Simulates, prints a summary of S11 and writes s11.csv and the .s1p file.
vswr <board> <dir> [--start GHz] [--stop GHz] [--fast --standard] [--feed pad]	Imports a board, simulates its antenna and writes s11.csv; free, also after the trial (used by the KiCad plugin).
feed-preview <board> <out.png> [--feed pad]	Draws the area around the feed pad (used by the KiCad plugin).
post <project.json> <dir>	Post-processes an existing simulation folder again.
plot <dir> <out.png> [reference]	Plots the S11 and VSWR of a run, optionally against a .csv or .s1p reference.
match <project.json> <dir> "shuntC=1.8p; seriesL=6.8n" [out.csv]	Applies a matching network to the result of a run.
automatch <project.json> <dir> <GHz> [wurth]	Proposes L-networks matching the result of a run at a frequency, with ideal values or Würth kit parts.
tune <project.json> <dir> --f0 GHz --	Tunes the length parameter to resonate at f0, then

Command	What it does
<code>length NAME [--match NAME]</code>	the match parameter to the lowest S11 there; writes tuned.json (section 7).
<code>pattern <project.json> <dir> [GHz]</code>	Computes the far field of a finished run: pattern.csv and polar plots as PNG.
<code>currents <project.json> <dir> [out.csv]</code>	Writes the surface current of a finished run, per copper layer.
<code>export-kicad <project.json> <out.kicad_mod></code>	Exports a KiCad footprint.
<code>export-eagle <project.json> <out.lbr></code>	Exports an Eagle library.
<code>export-altium <project.json> <out.PcbLib></code>	Exports an Altium footprint library.
<code>status</code>	Prints full, trial or over for this PC, with the details and the PC ID.
<code>license [license.txt]</code>	Shows the license or trial status and this PC's ID, or installs a license file.

The command line uses the settings saved in the project, and finds openEMS in the same places as the program unless you give its path to run.

Example: a quick sweep

A project is a JSON text file, so a script can change a parameter's expression, run the simulation and collect the results. For example, in PowerShell:

```
$cli = "C:\Program Files\LW RF Studio\LWRFStudioCli.exe"
foreach ($l in 9, 10, 11) {
    $p = Get-Content ifa.json -Raw | ConvertFrom-Json
    ($p.Parameters | Where-Object Name -eq 'LE').Expression = "$l"
    $p | ConvertTo-Json -Depth 10 | Set-Content "ifa_LE$l.json"
    & $cli run "ifa_LE$l.json" "sweep_LE$l"
}
```

KiCad plugin: LW Antenna Check

LW Antenna Check simulates the VSWR of the antenna on the board open in KiCad's PCB editor (KiCad 7 to 10). It uses the command line of LW RF Studio, so LW RF Studio must be installed on the same PC. Setup installs the plugin when it finds KiCad (tick the KiCad option); it can also be installed with KiCad's Plugin and Content Manager from lwtech.org/kicad-plugin.

1. Save the board: the last saved version is simulated.
2. Open Tools > External Plugins > LW Antenna Check.
3. Set the frequency range and the number of points.

4. Choose the feed pad, where the radio signal enters the antenna: Automatic takes a pad named ANT, RF or FEED; or pick a pad from the list, or select it in the PCB editor. A picture shows the area around the chosen feed.
5. Choose the speed (Fast estimate, Standard or Accurate) and click Simulate. The VSWR curve shows the best match and the band below VSWR 2; click the curve to read a value.

The VSWR simulation is free and keeps working after the trial. **Open in LW RF Studio** opens the board, with the chosen feed, in the full program, which needs the trial or a license.

14. Trial and license

The trial period is valid 30-days and it is locked to the PC. It cannot be renewed.

Getting a license

1. Open **Help > Licence**, or use the license window that opens after the trial. It shows this PC's ID, a 16-character code.
2. Click **Buy a license online**: the order form of lwtech.org opens with this PC's ID already filled in (it is also copied to the clipboard), and you pay by card. To ask a question first, use **Contact form**, or **Copy** to copy the ID.
3. Wattlet AS sends you the license by e-mail, usually within one working day, with the invoice: a block of text from a BEGIN line to an END line, or a license.txt file.
4. Paste the whole license in the box and click **Activate**, or click **Load from file** and choose the file.

The program is unlocked at once; there is no need to restart. The same window then shows who the license is for and, if it has one, its end date.

LW RF Studio licence

30-day trial: 25 days left (until 2026-11-19).

LW RF Studio (PCB Antenna Lab and SmithMatch) runs for 30 days from the first start on a PC. After this trial it needs a licence for that PC.

1. Get a licence

A licence is for one PC. The button opens the order form on lwtech.org with this PC ID already filled in:

ABCD-EFGH-JKMN-PQRS

Buy a licence online Copy Contact form

2. Enter the licence you received

Activate Load from file...

Close

The license window (the PC ID here is a sample).

Good to know

- A license works on **one PC**. The PC ID comes from the Windows installation: it stays the same when you update the program.
- A license can be revoked by Wattlet AS, for example after a refund.

Licence messages

Message	Meaning
This license is for the PC with ID ...	The license was issued for another PC. Send this PC's ID to get one for it.
This license expired on ...	The license has an end date that has passed. Contact lwtech.org to renew it.
The license text is damaged	Part of the text is missing. Copy all of it, including the BEGIN and END lines.
The license is not valid	The text was changed, or it was not issued by Wattlet AS.
This is not an LW RF Studio license	The license is for another program, such as PCB Antenna Designer. Send this PC's ID to get an LW RF Studio license.
The license of this PC was revoked	Wattlet AS revoked the license, for example after a refund. Contact lwtech.org.

Legal

LW RF Studio is Copyright © 2026 Wattlet AS, all rights reserved; LW RF Studio and lw tech are brands of Wattlet AS. Its use is governed by the license agreement shown at installation (EULA.txt in the installation folder). The program uses third-party components under their own licenses, listed in THIRD-PARTY-NOTICES.txt and the third-party-licenses folder. The openEMS solver, by Thorsten Liebig and contributors, is free software under the GNU GPL v3 and is installed separately. **Help > About LW RF Studio** shows the version and these credits.

15. Tips and troubleshooting

A tuning workflow

1. Start from the template closest to your antenna, or import your board.
2. Set the real stackup: thickness, ϵ_r and $\tan\delta$ of your PCB material.
3. Choose the Fast or Standard preset and run. Check that the resonance is inside the sweep.
4. Tune with the slider and re-run until the resonance and the match are where you want them, or let Simulate > Tune to frequency do it (section 7). For an inverted-F:
 - o A longer arm lowers the resonance; a shorter arm raises it.

- o Moving the feed further from the short raises the input resistance; moving it closer lowers it.
- 5. Choose **Accurate** and run again for the final result.
- 6. If needed, try a matching network on the Matching tab, or design one in SmithMatch.
- 7. Export the antenna as a KiCad footprint, an Eagle library or an Altium footprint library.

Why simulation and measurement differ

A few percent between the simulated and measured resonance is normal. Common causes:

- **εr of FR-4** varies between manufacturers and with frequency. Use the value your board maker gives at your frequency.
- **The ground plane:** an IFA uses the ground as part of the antenna, so its size matters. Simulate the ground you will really have.
- **Things not in the model:** the enclosure, the battery, nearby components, the solder mask and the copper thickness. Copper is modelled as a zero-thickness sheet.
- **The measurement:** the test cable and the hand near the board detune the antenna.

To compare, load the measured S11 with **Simulate > Load reference S11**.

Problems and solutions

Problem	What to do
"openEMS was not found"	Install openEMS (section 2) and select openEMS.exe with Tools > Locate openEMS.exe .
The run stops at once: "openEMS ignored the feed port" or "No energy entered the model"	The feed does not touch the copper or is shorted. Check its position and layers, and that copper exists on both of its layers at that point.
The run takes very long or reaches the maximum timesteps	The antenna is badly matched or high-Q, or the feed excites almost nothing. Check the feed, and that the resonance is inside the sweep. See "Making a run faster" in section 6.
No dip in S11	The resonance is outside the sweep. Widen the start and stop frequencies, or check the dimensions.
The mesh is very large (millions of cells)	Look at the mesh with the Mesh box. Very small cells come from tiny gaps or offsets between shapes; align the shapes or raise Merge lines closer than . For imported boards, untick the shapes far from the antenna.
No radiation pattern	Tick Radiation pattern and run again. Check that nf2ff.exe is in the openEMS folder.
The Current tab is empty	Tick Current distribution and run again.

Problem	What to do
An imported board has no dielectric	The board outline is not closed. Close it on Edge.Cuts (KiCad) or the Dimension layer (Eagle), or add a Board shape.
The results are from an older design	Results on the tabs are from the last run. Run again after changing the design.
The PC is slow during a run	Set Threads to fewer than the number of cores.
SmithMatch... says “Run a simulation first”	SmithMatch takes the simulated antenna impedance. Run a simulation, or open a project saved with its results.
Only the license window opens	The 30-day trial has ended. Enter a license (section 14); closing the window without one closes the program.

When a problem persists, send the project file and openEMS.log from the simulation folder with the contact form on lwtech.org.

16. Quick reference

Keyboard

Key	Action
F5	Run the simulation
Ctrl+O	Open a project
Ctrl+S	Save the project and its results
Ctrl+I	Import a PCB board
Ctrl+M	Open SmithMatch (Tools > SmithMatch)
Ctrl+P	Print a report
Esc	Remove the data tips from the charts
Enter (in the Ladder field of the Matching tab)	Apply the matching network
Esc (in SmithMatch)	Cancel placing a part
Ctrl+N, Ctrl+O, Ctrl+S, Ctrl+P (in SmithMatch)	New, open, save or print a SmithMatch design

Mouse

View	Drag	Wheel	Double-click	Click
------	------	-------	--------------	-------

View	Drag	Wheel	Double-click	Click
Geometry	Pan	Zoom	Fit the board	Select the shape (opens its row in the Shapes tab)
Geometry in 3D or Realistic	Rotate	Zoom	Start view	—
Charts	Pan	Zoom	—	Data tip (Ctrl+click adds one); middle-click fits; right-click to save or copy
3D pattern, Current	Rotate	Zoom	Start view	Read the gain or current at that point
SmithMatch chart	—	Zoom	—	Fix the part being placed, or add a datapoint (with Mouse adds DP ticked)

Expressions

Operators	+ - * / ^, and .* ./ .^ as in MATLAB
Constant	pi
Functions	sin cos tan asin acos atan sqrt abs exp log round floor ceil min max
Units	Millimetres everywhere; Paste table converts mil, µm, cm, in and m

Files

File	What it is
*.json	A project
*.smith	A SmithMatch design (section 12)
<project>_sim\	The simulation folder of a project (section 7)
openEMS.log	The solver output of the last run, in the simulation folder
s11.csv, antenna.s1p, pattern.csv	Results of the last run, in the simulation folder

Contact

Licences, questions and bug reports: lwtech.org/contact, lw tech (Wattlet AS).